

# Handheld Ultrasonic Flowmeter

## User Manual

### PWF-U2000H



# Contents

|                                                                                         |    |
|-----------------------------------------------------------------------------------------|----|
| 1. Introduction .....                                                                   | 1  |
| §1.1 Preface .....                                                                      | 1  |
| §1.2 Main Features .....                                                                | 1  |
| §1.3 Principle of Measurement .....                                                     | 2  |
| §1.4 Packing List (Standard Configuration) .....                                        | 2  |
| §1.5 Front view .....                                                                   | 3  |
| §1.6 Typical Applications .....                                                         | 4  |
| §1.7 Data Integrity and Built-in Time-Keeper .....                                      | 4  |
| §1.8 Product Identification .....                                                       | 4  |
| §1.9 Basic Technical Data .....                                                         | 5  |
| 2. Starting Measurement .....                                                           | 6  |
| §2.1 Built-in Battery .....                                                             | 6  |
| §2.2 Power On .....                                                                     | 6  |
| §2.3 Keypad .....                                                                       | 7  |
| §2.4 Menu Windows .....                                                                 | 7  |
| §2.5 Steps to Configure the Parameters .....                                            | 8  |
| §2.6 Transducers Mounting Allocation .....                                              | 10 |
| §2.7 Transducers Installation .....                                                     | 11 |
| §2.7.1 Transducers Spacing .....                                                        | 11 |
| §2.7.2 V-method Installation .....                                                      | 11 |
| §2.7.4 W-method Installation .....                                                      | 13 |
| §2.7.5 N-method Installation .....                                                      | 13 |
| §2.8 Installation Checkup .....                                                         | 13 |
| §2.8.1 Signal Strength .....                                                            | 13 |
| §2.8.2 Signal Quality .....                                                             | 14 |
| §2.8.3 Total Transit Time and Delta Time .....                                          | 14 |
| §2.8.4 Time Ratio between the Measured Total Transit Time and the Calculated Time ..... | 14 |
| 3. Menu Window Details .....                                                            | 15 |
| §3.1 Menu Windows Arrangement .....                                                     | 15 |
| §3.2 Menu Window Details .....                                                          | 15 |
| 4. How To .....                                                                         | 18 |
| 4.1 How to judge if the instrument works properly .....                                 | 18 |
| 4.2 How to judge the liquid flowing direction .....                                     | 19 |
| 4.3 How to change between units systems .....                                           | 19 |
| 4.4 How to select a required flow rate unit .....                                       | 20 |
| 4.5 How to use the totalizer multiplier .....                                           | 20 |
| 4.6 How to open or shut the totalizers .....                                            | 20 |
| 4.7 How to reset the totalizers .....                                                   | 20 |
| 4.8 How to restore the flow meter with default setups .....                             | 21 |
| 4.9 How to use the damper .....                                                         | 21 |
| 4.10 How to use the zero-cutoff function .....                                          | 21 |
| 4.11 How to setup a zero point .....                                                    | 22 |
| 4.12 How to get a scale factor for calibration .....                                    | 22 |
| 4.13 How to use the system locker .....                                                 | 22 |
| 4.14 How to use 4-20mA current loop output .....                                        | 23 |
| 4.15 How to use the Frequency Output .....                                              | 24 |
| 4.16 How to use the Totalizer Pulse Output .....                                        | 25 |
| 4.18 How to use the built-in Buzzer .....                                               | 27 |
| 4.19 How to use the OCT output .....                                                    | 27 |
| 4.20 How to modify the built-in calendar .....                                          | 27 |
| 4.21 How to view the Date Totalizers .....                                              | 27 |
| 4.22 How to use the Working Timer .....                                                 | 28 |
| 4.23 How to use the manual totalizer .....                                              | 28 |
| 4.24 How to know how long the battery will last .....                                   | 28 |

|                                                                                    |    |
|------------------------------------------------------------------------------------|----|
| 4.25 How to check the ESN and other minor detail .....                             | 28 |
| 4.26 How to use the data logger for scheduled output .....                         | 29 |
| 4.27 How to output analogue voltage signal .....                                   | 29 |
| 4.28 How to adjust the LCD display .....                                           | 29 |
| 4.29 How to use RS232/RS485? .....                                                 | 29 |
| 4.30 How to use automatic amending function for offline compensation .....         | 30 |
| 4.31 How to use batch controller .....                                             | 30 |
| 4.32 How to adjust the analogue output .....                                       | 30 |
| 4.33 How to solidify the parameters .....                                          | 31 |
| 4.34 How to enter the parameters of user-type-transducer .....                     | 31 |
| 4.35 How to use the circular display function .....                                | 31 |
| 4.36 How to enter into the linearity correcting? How to enter into the data? ..... | 32 |
| 4.37 How to save / restore frequently-used pipe parameters .....                   | 33 |
| 5. Troubleshooting .....                                                           | 33 |
| §5.1 Power-on Error Displays and Counter-Measures .....                            | 34 |
| §5.2 Error Code and Counter-Measures .....                                         | 34 |
| §5.3 Other Problems and Solutions .....                                            | 35 |
| 6. Communication Protocol .....                                                    | 37 |
| §6.1 General .....                                                                 | 37 |
| §6.2 Interface Pin-out Definition .....                                            | 37 |
| §6.3 the Protocol .....                                                            | 37 |
| §6.4 Protocol Prefix Usage .....                                                   | 37 |
| §6.5 Codes for the Keypad .....                                                    | 37 |
| 7. Service .....                                                                   | 37 |
| §7.1 Service .....                                                                 | 37 |
| §7.2 Software Upgrade Service .....                                                | 37 |
| Appendix .....                                                                     | 38 |
| 1. Sound speed data of liquid (unit: m/s) .....                                    | 38 |
| 2. Sound speed data of solid (unit: m/s) .....                                     | 38 |
| 3. Sound speed in water at atmosphere pressure .....                               | 39 |

# 1. Introduction

## §1.1 Preface

Welcome to the ultrasonic flow meter that has been manufactured with patent technologies and is equipped with more functions and advanced performance than our previous versions.

The ultrasonic flow meter has been upgraded based on the previous ultrasonic flow meter which is still the main product line of the company. The new Version retains most of the excellent features and functions of the previous versions: the pulse measurement technology, the ultrasonic igniting and the small signal receiving circuits etc. The main improvements are made on the battery supply circuit and on the transmitting circuits. All other circuits are simply integrated into this new version without major modifications, due to the fact that we have already applied the most advanced measurement technologies and attained a more reliable model of ultrasonic flow meter.

flow meter incorporates the latest ICs manufactured from the famous semiconductor manufacturers like Philips, Maxim, TI, Win bond, and Xilinx. The hardware features the ease of operation, high accuracy and outstanding reliability, while the software provides a very friendly user interface and much more functions. It employs a patent balanced lower voltage multi-pulse igniting circuit which increases the anti-interference ability magnificently so that the flow meter will work properly even in demanding industrial environments such as those with power frequency transverter working nearby.

Other outstanding features:

----the signal receiving circuits feature self-adapting performance so as to ensure that the user can easily operate the instrument without any adjustment.

----the built-in rechargeable Ni-MH battery can work continuously for more than 12 hours without recharging.

The advanced circuit design, the integration of the latest semiconductors, the user-friendly software interface both in English and Chinese languages and small-sized PCB board, all these features combine to make the ultrasonic flow meter the best and the biggest seller on the Chinese market. Moreover, it is gaining more and more recognition on the international flow meter market

## §1.2 Main Features

- \* Large-screen LCD
- \* Built-in data-logger
- \* High accuracy measuring
- \* Non-contacting measuring
- \* Built-in rechargeable battery
- \* Wide measuring range

\* Small and light

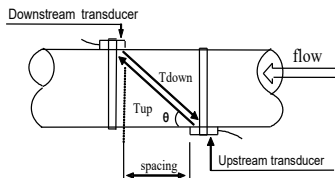
\* RS-232 serial interface

### §1.3 Principle of Measurement

The ultrasonic flow meter is designed to measure the fluid velocity of liquid within a closed conduit. The transducers are a non-contacting, clamp-on type, which will provide benefits of non-fouling operation and easy installation.

The transit time flow meter utilizes two transducers that function as both ultrasonic transmitters and receivers. The transducers are clamped on the outside of a closed pipe at a specific distance from each other. The transducers can be mounted in V-method where the sound transverses the pipe twice, or W-method where the sound transverses the pipe four times, or in Z-method where the transducers are mounted on opposite sides of the pipe and the sound crosses the pipe once. This selection of the mounting method depends on pipe and liquid characteristics. The flow meter operates by alternately transmitting and receiving a frequency modulated burst of sound energy between the two transducers and measuring the transit time that it takes for sound to travel between the two transducers. The difference in the transit time measured is directly and exactly related to the velocity of the liquid in the pipe, show as follows:

$$V = \frac{MD}{\sin 2\theta} \times \frac{\Delta T}{T_{up} + T_{down}}$$



Where

$\theta$  is the include angle to the flow direction

M is the travel times of the ultrasonic beam

D is the pipe diameter

$T_{up}$  is the time for the beam from upstream transducer to the downstream one

$T_{down}$  is the time for the beam from downstream transducer to the upstream one


$\Delta T = T_{up} - T_{down}$

### §1.4 Packing List (Standard Configuration)

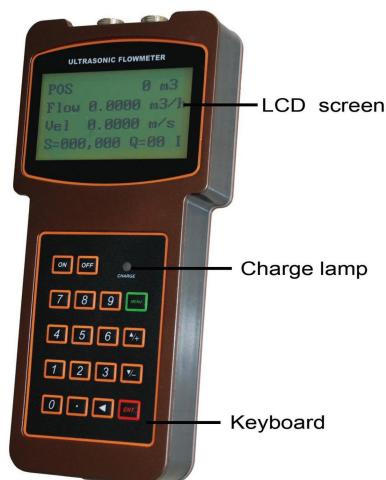Check up the packing list carefully before installing

| Name                    | QTY (pcs) |
|-------------------------|-----------|
| Main Unit               | 1         |
| Medium transducer       | 2         |
| Ultrasonic signal cable | 2         |
| Data line               | 1         |
| AC adapter              | 1         |
| Coupling agent          | 1         |
| Belt stretcher          | 2         |
| Tape                    | 1         |
| User manual             | 1         |
| Carrying case           | 1         |

### §1.5 Front view



### §1.6 Typical Applications

The flow meter can be virtually applied to a wide range of measurements. A variety of liquid applications can be accommodated: ultra-pure liquids, potable water, chemicals, raw sewage, reclaimed water, cooling water, river water, plant effluent, etc. Because the instrument and transducers are non-contacting and have no moving parts, the flow meter can not be affected by system pressure, fouling or wear. Standard transducers are rated to 110 °C. Higher temperatures can be accommodated. For further information, please consult the manufacturer for assistance.

### §1.7 Data Integrity and Built-in Time-Keeper

All user-inputted configuration values are retained in the built-in non-volatile flash memory that can store them for over 100 years, even if power is lost or turned off. Password protection is provided to avoid inadvertent configuration changes or totalizer resets.

A time-keeper is integrated in the flow meter for the index of date totalizing and works as the time base of flow accumulation. It keeps operating as long as the battery's terminal voltage is over 1.5V. In case of battery failure, the time-keeper will not keep running and it will lose proper time values. The user must re-enter proper time values in case the battery becomes totally exhausted. An improper time value affects no other functions but the date totalizer.

### §1.8 Product Identification

Each set of the has a unique product identification or ESN written into the software that can only be modified with a special tool by the manufacturer. In case of any hardware failure, please provide this number which is located on menu window number M61 when contacting the manufacture.

## §1.9 Basic Technical Data

|                                |                                                                                                                                                                                    |
|--------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Linearity</b>               | 0.5%                                                                                                                                                                               |
| <b>Repeatability</b>           | 0.2%                                                                                                                                                                               |
| <b>Accuracy</b>                | ±1% of reading at rates>0.2 mps                                                                                                                                                    |
| <b>Response Time</b>           | 0-999 seconds, user-configurable                                                                                                                                                   |
| <b>Velocity</b>                | ±32 m/s                                                                                                                                                                            |
| <b>Pipe Size</b>               | 15mm-6000mm                                                                                                                                                                        |
| <b>Totalizer</b>               | 7-digit totals for net, positive and negative flow respectively                                                                                                                    |
| <b>Liquid Types</b>            | Virtually all liquids                                                                                                                                                              |
| <b>Security</b>                | Setup values Modification Lockout. Access code needs unlocking                                                                                                                     |
| <b>Display</b>                 | 4x8 Chinese characters or 4x16 English letters                                                                                                                                     |
| <b>Communication Interface</b> | RS-232, baud-rate: from 75 to 57600. Protocol made by the manufacturer and compatible with that of the FUJI ultrasonic flow meter. User protocols can be made by user requirements |
| <b>Transducer Cord Length</b>  | Standard 5m x 2, optional 10m x 2                                                                                                                                                  |
| <b>Power Supply</b>            | 3 AAA built-in Ni-H batteries. When fully recharged it will last over 12 hours of operation.<br>100V-240VAC for the charger                                                        |
| <b>Data Logger</b>             | Built-in data logger can store over 2000 lines of data                                                                                                                             |
| <b>Manual Totalizer</b>        | 7-digit press-key-to-go totalizer for calibration                                                                                                                                  |
| <b>Housing Material</b>        | ABS                                                                                                                                                                                |
| <b>Case Size</b>               | 210x90x30mm                                                                                                                                                                        |
| <b>Main unit Weight</b>        | 500g with batteries                                                                                                                                                                |

## 2. Starting Measurement

### §2.1 Built-in Battery

The instrument can operate either from the built-in Ni-H rechargeable battery, which will last over 12 hours of continuous operation when fully recharged, or from an external AC/power supply from the battery charger.

The battery charging circuits employ a scheme of constant-current and constant-voltage. It has a characteristic of fast charging at the beginning and very slow charging when the battery approaches to full recharge. Generally, when the green LED starts coming on, the battery would be nearly 95% recharged and when the red LED is off, the battery would be 98% recharged.

Since the charging current becomes tapered when the battery recharge is nearly completed, i.e. the charging current becomes smaller and smaller, therefore, there should be no over-recharging problem. That means the charging progress can last very long. The charger can be connected to the handset all the time when an around-the-clock measurement is required.

When fully recharged, the terminal voltage reaches around 4.25V. The terminal voltage is displayed on window M07. When the battery is nearly consumed, the battery voltage drops to below 3V. The user can obtain an approximate battery working time from the battery voltage.

A software battery working time estimator is integrated in this instrument based on the terminal voltage. Please note that the estimator may have relatively bigger errors in the estimated working time, especially when the voltage is in the range of around 3.70 to -3.90 volt.

### §2.2 Power On

Press the **ON** key to switch on the instrument and press the **OFF** to turn off the power.

Once the flow meter is switched on, it will run a self diagnostic program, checking first the hardware and then the software integrity. If there is any abnormality, corresponding error messages will display.

Generally, there should be no display of error messages, and the flow meter will go to the most commonly used Menu Window Number 01 (short for M01) to display the Velocity, Flow Rate, Positive Totalizer, Signal Strength and Signal Quality, based on the pipe parameters configured last time by the user or by the initial program.

The flow measurement program always operates in the background of the user interface. This means the flow measurement will keep on running regardless of any user menu window browsing or viewing. Only when the user enters new pipe parameters will the flow meter change measurement to the new parameter changes.

When new pipe parameters have been entered or when the power has been just switched on, the flow meter will enter an adjusting mode to make the signals magnified with proper amplification. By this step, the flow meter is going to find the best threshold of receiving signal. The user will see the progress by the number 1, 2, or 3, which are indicated on the right lower corner of the LCD display.

When the transducers have been adjusted on the pipe by the user, the flow meter will re-adjust the signal automatically.

Any user-entered configuration value will be retained into the NVRAM of the flow meter, until it is modified by the user.

### §2.3 Keypad

The keypad for the operation of the flow meter has 16+2 keys, as shown by the right picture.

Keys  ~  and  are keys to enter numbers

Key  is the going UP key, when the user wants to go to the upper menu window. It also works as the “+” key when entering numbers

Key  is the going DOWN key, when the user wants to go down-sided menu window. It also works as the “-” key when entering numbers.

Key  is backspace key, when the user wants go left or wants backspace the left character that is located to the left of the cursor.

Key  is the ENTER key for any inputting or selections.

Key  is the key for the direct menu window jump over.

Whenever the user wants to proceed to a certain menu window, the user can press this key followed by 2-digit numbers.

The  key is shortened as the ‘M’ key afterward when referring to the menu windows.

The  key is for the power on.

The  key is for the power off.



### §2.4 Menu Windows

The user interface of this flow meter comprises about 100 different menu windows that are numbered by M00, M01, M02 ... M99.

There are 2 methods to enter certain menu window:

- (1) Direct going/entering. The user can press the **MENU** key followed by two-digit number keys. For example, the menu window M11 is for the entering of pipe outer diameter. The display will go to the M11 menu window after the user presses **MENU** **1** **1**.
- (2) Pressing **▲/+** and **▼/-** keys. Each time of the **▲/+** key pressing will proceed to the

Lower - numbered menu window. For example, if the current window is on M12, the display will go to the number M11 window after pressing the **▲/+** key.

There are three different types of menu windows:

- (1) Menu windows for number entering, like M11 for the entering of pipe outer diameter.
- (2) Menu windows for option selection/selecting options, like M14 for the selection of pipe materials.
- (3) Displaying windows only, like M00 to display Velocity, Flow Rate etc.

For number entering windows, the user can directly press the starting digit key when the user is going to modify the value. For example, when the current window is on M11, and the user is going to enter 219.2345 as the pipe outer diameter, the user can get the numbers entered by pressing the following serial keys: **2** **1** **9** **.** **2** **3** **4** **5** **ENT**.

For the option selection windows, the user should first press the **ENT** key to a selection modification mode and then select the relevant options by pressing the **▲/+** and **▼/-** keys or the digit keys to select the option with a number antecedent to the option. In the end, the **ENT** key must be pressed to make the selection. For example, with menu window M14 for the selection of pipe material selection, (the **MENU** **1** **4** should be pressed first to enter this menu window if the current menu window is on a different window. The pipe material is stainless steel which has a number "1" antecedent to "stainless steel" on the display, the user should first press the **ENT** key to enter into a selection modification mode, then either make the selection by pressing the **▲/+** and **▼/-** keys to make the cursor on the line that displays "1. Stainless Steel", or make the selection by pressing the **1** key directly.

Generally, the **ENT** key must be pressed to enter a modification mode. If the "Locked M47 Open" message is indicated on the lowest line of the LCD display, it means the modification operations is locked out. In such cases, the user should go to M47 to have the instrument unlocked first before any further modification can be made.

## §2.5 Steps to Configure the Parameters

The following parameters need to be configured for a proper measurement:

- (1) Pipe outer diameter
- (2) Pipe wall thickness
- (3) Pipe materials (for non-standard pipe materials\*, the sound speed for the material must be configured too)

\*Standard pipe materials and standard liquids refer to those with the sound parameters that have already been programmed into software of the flow meter, therefore there is no need to configure them

- (4) Liner material and its sound speed and thickness, if there is any liner.
- (5) Liquid type (for non-standard liquids, the sound speed of the liquid is also needed)
- (6) Transducer type adapted to the flow meter. Generally the Standard M1 clamp-on transducers will be the selected option.
- (7) Transducer mounting methods (the V-method or Z-method is the common option)
- (8) Check up the Space displayed on M25 and install the transducers accordingly.

For standard pipe materials and standard liquids, the following detailed step-by-step setup is recommended.

- (1) Press keys **MENU** **1** **1** to enter M11 window to input the digits for the pipe outer diameter, and then press **ENT** key.
- (2) Press key **▼/↓** to enter M12 window to input the digits for the pipe outer diameter and then press **ENT** key.
- (3) Press key **▼/↓** to enter M14 window, and press **ENT** key to enter the option selection mode. Use keys **▲/↑** and **▼/↓** to scroll up and down to the intended pipe material, and then press **ENT** key.
- (4) Press key **▼/↓** to enter M16 window, press **ENT** key to enter the option selection mode, use keys **▲/↑** and **▼/↓** to scroll up and down to the liner material, and then press **ENT** key. Select "No Liner", if there is no liner.
- (5) Press key **▼/↓** to enter M20 window, press **ENT** key to enter the option selection mode, use keys **▲/↑** and **▼/↓** to scroll up and down to the proper liquid, and then press **ENT** key.
- (6) Press key **▼/↓** to enter M23 window, press **ENT** key to enter the option selection mode, use keys **▲/↑** and **▼/↓** to scroll up and down to the proper transducer type, and then press **ENT** key.
- (7) Press key **▼/↓** to enter M24 window, press **ENT** key to enter the option selection mode, use keys **▲/↑** and **▼/↓** to scroll up and down to the proper transducer mounting method, and then press **ENT** key.
- (8) Press key **▼/↓** to enter M24 window to install the transducers on the pipe, and then press **ENT** key to go to M01 for the results.

The first-time users may need some time to get familiar with the operation. However, the user friendly interface of the instrument makes the operation quite easy and simple. Before long, the user will configure the instrument with very little key pressing, since the interface allows the user to go to the desired operation directly without any extra steps.

The following tips will facilitate the operation of this instrument.

- (1) When the window display is between M00 to M09, press a number key **[x]**, the user will go directly to the M0x window. For example, if the current window displays M01, press 7 and the user will go to M07.
- (2) When the window display is under M00 to M09, press the ENT key and the user will go to







M90; press ENT key to return. Press the dot key to go to M11

(3) When the window display is under M25, press ENT key to go to M01.

## §2.6 Transducers Mounting Allocation

The first step in the installation process is the selection of an optimum location in order to obtain a more accurate measurement. For this to be completed effectively, a basic knowledge about the piping and its plumbing system would be advisable.

An optimum location would be defined as a straight pipe length full of liquid that is to be measured. The piping can be in vertical or horizontal position. The following table shows

| P i p i n g   C o n f i g u r a t i o n<br>a n d<br>T r a n s d u c e r   P o s i t i o n | U p s t r e a m<br>D i m e n s i o n | D o w n s t r e a m<br>D i m e n s i o n |
|-------------------------------------------------------------------------------------------|--------------------------------------|------------------------------------------|
|                                                                                           | L u p<br>x<br>D i a m e t e r s      | L d n<br>x<br>D i a m e t e r s          |
|          | 1 0 D                                | 5 D                                      |
|          | 1 0 D                                | 5 D                                      |
|          | 1 0 D                                | 5 D                                      |
|          | 1 2 D                                | 5 D                                      |
|          | 2 0 D                                | 5 D                                      |
|          | 2 0 D                                | 5 D                                      |
|          | 3 0 D                                | 5 D                                      |

Examples of optimum locations.

Principles to selection of an optimum location

- (1) Install the transducers on a longer length of the straight pipe. The longer the better, and make sure that the pipe is completely full of liquid.
- (2) Make sure that the temperature on the location does not exceed the range for the transducers. Generally speaking, the closer to the room temperature, the better.
- (3) Take the pipe fouling into consideration. Select a straight length of a relatively newer pipe. If the condition is not satisfying, consider the fouling thickness as part of the liner for a better result.
- (4) Some pipes have a kind of plastic liner, and between the outer pipe and the liner there may be a certain thickness difference that will prevent the ultrasonic waves from direct traveling. Such conditions will make the measurement very difficult. Whenever

possible, try to avoid this kind of pipes. If impossible, try our plug-in transducers that are installed permanently on the pipe by drilling holes on the pipe while liquid is running inside.

## §2.7 Transducers Installation

The transducers used by the series ultrasonic flow meter are made of piezoelectric crystals ceramic plate; both for transmitting and receiving ultrasonic signals through the wall of liquid piping system. The measurement is realized by measuring the traveling time difference of the ultrasonic signals. Since the difference is very small, the spacing and the alignment of the transducers are critical factors to the accuracy of the measurement and the performance of the system. Meticulous care should be taken for the installation of the transducers.

Steps to the installation of the transducers

- (1) Locate an optimum position where the straight pipe length is sufficient, and where pipes are in a favorable condition, e.g., newer pipes with no rust and ease of operation.
- (2) Clean any dust and rust. For a better result, polishing the pipe with a sander is strongly recommended.
- (3) Apply adequate coupler to the spot where the transducers are to be installed and leave no gap between the pipe surface and the transducers.

Extra care should be taken to avoid any sand or dust particles left between the pipe outer surface and the transducers.

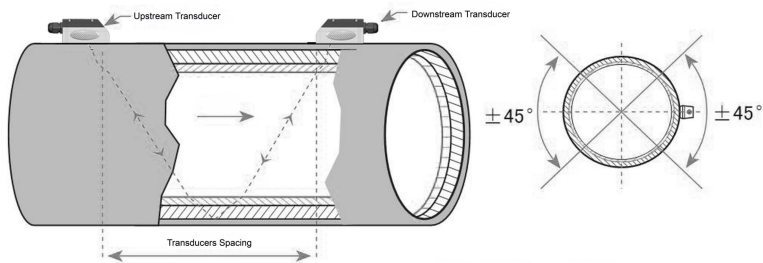
To avoid gas bubbles inside the upper part of the pipe, the transducers should be installed horizontally by the side of the pipe.

### §2.7.1 Transducers Spacing

The spacing value shown on menu window M25 refers to the distance of inner spacing between the two transducers. The actual transducers spacing should be as close as possible to the spacing value.


### §2.7.2 V-method Installation

V-method installation is the most widely mode for daily measurement with pipe inner diameters ranging from 15 mm to 400 mm. It is also called reflective mode.




## §2.7.3 Z-method Installation

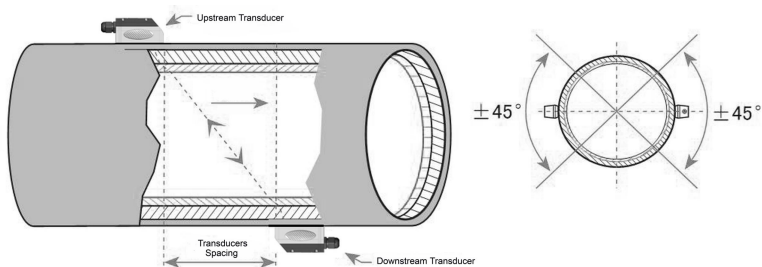Z-method is commonly used when the pipe diameter is above 200mm.



### §2.7.4 W-method Installation

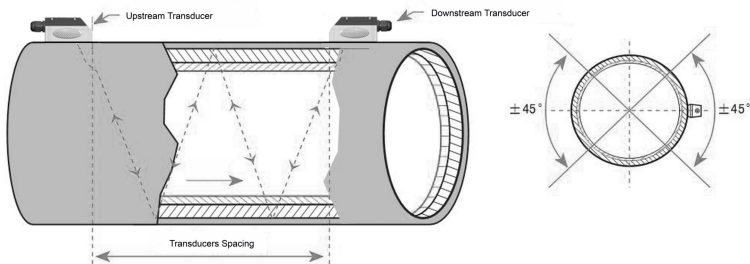W-method is usually used on plastic pipes with a diameter from 15mm to 50mm.



### §2.7.5 N-method Installation

Rarely used method.

## §2.8 Installation Checkup

Through the checkup of the installation, one can: check the receiving signal strength, the signal quality Q value, the traveling time difference of the signals, the estimated liquid speed, the measured traveling time of the signals and the calculated traveling time ratio. Therefore, optimum measurement result and longer running time of the instrument can be achieved.

### §2.8.1 Signal Strength

Signal strength indicates the amplitude of receiving ultrasonic signals by a 3-digit number. [000] means there is no signal detected and [999] refers to the maximum signal strength that can be received.

Although the instrument works well if the signal strength ranges from 500 to 999, stronger signal strength should be pursued, because a stronger signal means a better result. The

following methods are recommended to obtain stronger signals:

- (1) Relocate to a more favorable location, if the current location is not good enough for a stable and reliable flow reading, or if the signal strength is lower than 700.
- (2) Try to polish the outer surface of the pipe, and apply more coupler to increase the signal strength.
- (3) Adjust the transducers both vertically and horizontally while checking the varying signal strength, stop at the highest position, and then check the transducers spacing to make sure the transducers spacing is the same as what the M25 shows.

### §2.8.2 Signal Quality

Signal quality is indicated as the Q value in the instrument. A higher Q value would mean a higher Signal and Noise Ratio (short for SNR), and accordingly a higher degree of accuracy would be achieved. Under normal pipe condition, the Q value is in the range 600-900, the higher the better.

Causes for a lower Q value could be:

- (1) Interference of other instruments and devices such as a powerful transverter working nearby. Try to relocate the flow meter to a new place where the interference can be reduced.
- (2) Bad sonic coupling for the transducers with the pipe. Try to apply more coupler or clean the surface, etc.
- (3) Pipes are difficult to be measured. Relocation is recommended.

### §2.8.3 Total Transit Time and Delta Time

The numbers displayed on menu window M93 are called total transit time and delta time respectively. They are the primitive data for the instrument to calculate the flow rate inside the pipe. So the flow rate indication will vary accordingly with the total time and delta time.

The total transit time should remain stable or vary little.

If the delta time fluctuates higher than 20%, it means there are certain kinds of problems with the transducer installation.

### §2.8.4 Time Ratio between the Measured Total Transit Time and the Calculated Time

This ratio would be used to check the transducer installation. If the pipe parameters are entered correctly and the transducers are installed properly, the value for this ratio should be in the range of  $100 \pm 3$ . If this range is exceeded, the user should check:

- (1) If the pipe parameters are correctly entered.
- (2) If the actual spacing of the transducers is right and the same as what the window M25 shows.
- (3) If the transducers are installed properly in the right directions.
- (4) If the mounting location is good and if the pipe has changed shape or if there is too much fouling inside the pipes
- (5) Other poor conditions.

## 3. Menu Window Details

### §3.1 Menu Windows Arrangement

M00~M09 windows for the display of the flow rate, velocity, date time, totalizers, battery voltage and estimated working hours for the battery.

M10~M29 windows for entering the pipe parameter.

M30~M38 windows for flow rate unit selections and totalizer unit selections.

M40~M49 windows for response time, zeroing, calibration and modification password setup.

M50~M53 windows for the built-in logger

M60~M78 windows for time-keeper initialization, version and ESN information viewing and alarms.

M82 window for viewing date totalizer.

M90~M94 are diagnostic windows for a more accurate measurement.

M97~M99 are not windows but commands for the outputting of display copying and pipe parameter setups.

M+0~M+8 are windows for some additional functions, including a scientific calculator, viewer on records such as total working hours, turn-on and turn-off times, dates and times when the flow meter has been turned on or turned off.

Other menu windows such as M88 have no functions, or functions were canceled because they are not applied to this version of the software.

The major reason why the menu windows are arranged in this way is that the software programmer hopes that the menu window arrangement for this version can be compatibility with the previous versions of the flow meter software. This will make it easier for the former version users with this flow meter series.

### §3.2 Menu Window Details

| Menu window No. | Function                                                                                           |
|-----------------|----------------------------------------------------------------------------------------------------|
| M00             | Display three positive negative net totalizers, signal strength, signal quality and working status |
| M01             | Display POS totalizer, flow rate, velocity, signal strength, signal quality and working status     |
| M02             | Display NEG totalizer, flow rate, velocity, signal strength, signal quality and working status     |
| M03             | Display NET totalizer, flow rate, velocity, signal strength, signal quality and working status     |
| M04             | Display date and time, flow rate, signal strength, signal quality and working status               |

|            |                                                                                                                                                                                                                                                                                                                                                                                                                       |
|------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>M10</b> | Window for entering the outer perimeter of the pipe                                                                                                                                                                                                                                                                                                                                                                   |
| <b>M11</b> | Window for entering the outer diameter of the pipe<br>0 to 6000mm is the allowed range of the value.                                                                                                                                                                                                                                                                                                                  |
| <b>M12</b> | Window for entering pipe wall thickness                                                                                                                                                                                                                                                                                                                                                                               |
| <b>M13</b> | Window for entering the inner diameter of the pipe                                                                                                                                                                                                                                                                                                                                                                    |
| <b>M14</b> | Window for selecting pipe material<br>Standard pipe materials (that the user need not know the speed ) include:<br>(0) carbon steel    (1) stainless steel    (2) cast iron    (3) ductile iron<br>(4) copper    (5) PVC    (6) aluminum    (7) asbestos<br>(8) fiberglass                                                                                                                                            |
| <b>M15</b> | Window for entering the pipe material speed only for non-standard pipe materials                                                                                                                                                                                                                                                                                                                                      |
| <b>M16</b> | Window for selecting the liner material, select none for pipes without any liner<br>Standard liner materials that the user need not know the speed include:<br>(1) Tar Epoxy    (2) Rubber    (3) Mortar    (4) Polypropylene<br>(5) Polystyrol    (6)Polystyrene    (7) Polyester    (8) Polyethylene<br>(9) Ebonite    (10) Teflon                                                                                  |
| <b>M17</b> | Window for entering the liner material speed only for non-standard liner materials                                                                                                                                                                                                                                                                                                                                    |
| <b>M18</b> | Window for entering the liner thickness, if there is a liner                                                                                                                                                                                                                                                                                                                                                          |
| <b>M19</b> | Window for entering the ABS thickness of the inside wall of the pipe                                                                                                                                                                                                                                                                                                                                                  |
| <b>M20</b> | Window for selecting fluid type<br>For standard liquids that the user need not know the liquid speed include:<br>(0) Water    (1) Sea Water    (2) Kerosene    (3) Gasoline<br>(4) Fuel oil    (5) Crude Oil    (6) Propane at -45C<br>(7) Butane at 0C    (8)Other liquids    (9) Diesel Oil    (10)Caster Oil<br>(11)Peanut Oil    (12) #90 Gasoline    (13) #93 Gasoline    (14) Alcohol<br>(15) Hot water at 125C |
| <b>M21</b> | Window for entering the fluid sonic velocity only for non-standard liquids                                                                                                                                                                                                                                                                                                                                            |
| <b>M22</b> | Window for entering the viscosity of the non-standard liquids                                                                                                                                                                                                                                                                                                                                                         |
| <b>M23</b> | Window for selecting the proper transducers<br>There are 14 different types of transducers for selection.<br>If the user-type-transducers are used, 4 user type wedge parameters, which will be prompted by the software, should be entered following.<br>If the $\pi$ type transducers are used, $3\pi$ type transducers and pipe parameters should be entered following.                                            |
| <b>M24</b> | Window for selecting the transducer mounting methods<br>Four methods can be selected:<br>(0) V-method    (1) Z-method    (2) N-method    (3) W-method                                                                                                                                                                                                                                                                 |
| <b>M25</b> | Display the transducer mounting spacing                                                                                                                                                                                                                                                                                                                                                                               |
| <b>M26</b> | Entry to store the parameter configuration into the internal NVRAM                                                                                                                                                                                                                                                                                                                                                    |
| <b>M27</b> | Entry to load one set of saved parameters                                                                                                                                                                                                                                                                                                                                                                             |
| <b>M28</b> | Select YES or NO for the instrument to determine whether or not to hold (or                                                                                                                                                                                                                                                                                                                                           |

|                           |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |                |                |          |     |               |       |                    |       |                       |       |               |      |                      |       |                           |      |               |      |
|---------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|----------------|----------|-----|---------------|-------|--------------------|-------|-----------------------|-------|---------------|------|----------------------|-------|---------------------------|------|---------------|------|
|                           | to keep) the last correct value when poor signal condition occurs. YES is the default setup                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |                |                |          |     |               |       |                    |       |                       |       |               |      |                      |       |                           |      |               |      |
| <b>M29</b>                | Enter a value ranging from 000 to 999. 0 is the default value                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |                |                |          |     |               |       |                    |       |                       |       |               |      |                      |       |                           |      |               |      |
| <b>M30</b>                | Window for selecting unit system. Default value is 'Metric'. The change from English to Metric or vice versa will not affect the unit for totalizers.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                |                |          |     |               |       |                    |       |                       |       |               |      |                      |       |                           |      |               |      |
| <b>M31</b>                | <p>Window for selecting flow rate that will be used by the instrument afterward. Flow rate can be in</p> <table border="0"> <tr> <td>0. Cubic meter</td><td>short for (m3)</td></tr> <tr> <td>1. Liter</td><td>(l)</td></tr> <tr> <td>2. USA gallon</td><td>(gal)</td></tr> <tr> <td>3. Imperial Gallon</td><td>(igl)</td></tr> <tr> <td>4. Million USA gallon</td><td>(mgl)</td></tr> <tr> <td>5. Cubic feet</td><td>(cf)</td></tr> <tr> <td>6. USA liquid barrel</td><td>(bal)</td></tr> <tr> <td>7. Imperial liquid barrel</td><td>(ib)</td></tr> <tr> <td>8. Oil barrel</td><td>(ob)</td></tr> </table> <p>The flow unit in terms of time can be per day, per hour, per minute or per second. So there are 36 different flow rate units in total for selection.</p> | 0. Cubic meter | short for (m3) | 1. Liter | (l) | 2. USA gallon | (gal) | 3. Imperial Gallon | (igl) | 4. Million USA gallon | (mgl) | 5. Cubic feet | (cf) | 6. USA liquid barrel | (bal) | 7. Imperial liquid barrel | (ib) | 8. Oil barrel | (ob) |
| 0. Cubic meter            | short for (m3)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |                |                |          |     |               |       |                    |       |                       |       |               |      |                      |       |                           |      |               |      |
| 1. Liter                  | (l)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |                |                |          |     |               |       |                    |       |                       |       |               |      |                      |       |                           |      |               |      |
| 2. USA gallon             | (gal)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                |                |          |     |               |       |                    |       |                       |       |               |      |                      |       |                           |      |               |      |
| 3. Imperial Gallon        | (igl)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                |                |          |     |               |       |                    |       |                       |       |               |      |                      |       |                           |      |               |      |
| 4. Million USA gallon     | (mgl)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                |                |          |     |               |       |                    |       |                       |       |               |      |                      |       |                           |      |               |      |
| 5. Cubic feet             | (cf)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |                |                |          |     |               |       |                    |       |                       |       |               |      |                      |       |                           |      |               |      |
| 6. USA liquid barrel      | (bal)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                |                |          |     |               |       |                    |       |                       |       |               |      |                      |       |                           |      |               |      |
| 7. Imperial liquid barrel | (ib)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |                |                |          |     |               |       |                    |       |                       |       |               |      |                      |       |                           |      |               |      |
| 8. Oil barrel             | (ob)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |                |                |          |     |               |       |                    |       |                       |       |               |      |                      |       |                           |      |               |      |
| <b>M32</b>                | Window for selecting the totalizers' working unit                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |                |                |          |     |               |       |                    |       |                       |       |               |      |                      |       |                           |      |               |      |
| <b>M33</b>                | <p>Select totalizer multiplier</p> <p>The multiplier ranges from 0.001 to 10000</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |                |                |          |     |               |       |                    |       |                       |       |               |      |                      |       |                           |      |               |      |
| <b>M34</b>                | Turn on or turn off the NET totalizer                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                |                |          |     |               |       |                    |       |                       |       |               |      |                      |       |                           |      |               |      |
| <b>M35</b>                | Turn on or turn off the POS totalizer                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                |                |          |     |               |       |                    |       |                       |       |               |      |                      |       |                           |      |               |      |
| <b>M36</b>                | Turn on or turn off the NEG totalizer                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                |                |          |     |               |       |                    |       |                       |       |               |      |                      |       |                           |      |               |      |
| <b>M37</b>                | <p>Totalizer reset</p> <p>Password: 20140820</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |                |                |          |     |               |       |                    |       |                       |       |               |      |                      |       |                           |      |               |      |
| <b>M38</b>                | Press-a-key-to-run or to stop totalizer for easier calibration                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |                |                |          |     |               |       |                    |       |                       |       |               |      |                      |       |                           |      |               |      |
| <b>M39</b>                | Operational interface language selection in Chinese and English. This selection makes it possible that more than 2 billions of people on the world can read the menu.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                |                |          |     |               |       |                    |       |                       |       |               |      |                      |       |                           |      |               |      |
| <b>M40</b>                | Flow rate damper for a stable value. The input range is 0 to 999 seconds. 0 means there is no damping. Default value is 10 seconds                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |                |                |          |     |               |       |                    |       |                       |       |               |      |                      |       |                           |      |               |      |
| <b>M41</b>                | Lower flow rate cut-off to avoid invalid accumulation.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                |                |          |     |               |       |                    |       |                       |       |               |      |                      |       |                           |      |               |      |
| <b>M42</b>                | Zero point setup under the condition when there is no liquid running inside the pipe.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                |                |          |     |               |       |                    |       |                       |       |               |      |                      |       |                           |      |               |      |
| <b>M43</b>                | Clear the zero point set by the user, and restore the zero point set by the factory                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |                |                |          |     |               |       |                    |       |                       |       |               |      |                      |       |                           |      |               |      |
| <b>M44</b>                | Set up a manual flow bias. Generally this value should be 0.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                |                |          |     |               |       |                    |       |                       |       |               |      |                      |       |                           |      |               |      |
| <b>M45</b>                | <p>Scale factor for the instrument. The default value is '1'.</p> <p>Keep this value as '1', when no user calibration has been made.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                |                |          |     |               |       |                    |       |                       |       |               |      |                      |       |                           |      |               |      |
| <b>M50</b>                | Data timing recording interval the interval between each data record.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                |                |          |     |               |       |                    |       |                       |       |               |      |                      |       |                           |      |               |      |
| <b>M52</b>                | Device communication address 1-255                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |                |                |          |     |               |       |                    |       |                       |       |               |      |                      |       |                           |      |               |      |
| <b>M57</b>                | Setpoint flow generates a pulse                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |                |                |          |     |               |       |                    |       |                       |       |               |      |                      |       |                           |      |               |      |

|            |                                                                                                                                                                                                                                                                                                                               |
|------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>M60</b> | Set date time                                                                                                                                                                                                                                                                                                                 |
| <b>M61</b> | Display Version information and Electronic Serial Number (ESN) that are unique for each series flow meter.<br>The users can employ the ESN for instrumentation management                                                                                                                                                     |
| <b>M70</b> | LCD display backlight control.                                                                                                                                                                                                                                                                                                |
| <b>M77</b> | Buzzer setup.                                                                                                                                                                                                                                                                                                                 |
| <b>M85</b> | Maximum fluid velocity                                                                                                                                                                                                                                                                                                        |
| <b>M86</b> | Number of excitation pulses, 0 automatic mode, 0-4 data valid, default 0, no modification required                                                                                                                                                                                                                            |
| <b>M87</b> | Threshold, - 2mV default value, cannot be modified                                                                                                                                                                                                                                                                            |
| <b>M88</b> | Monitoring menu                                                                                                                                                                                                                                                                                                               |
| <b>M89</b> | Monitoring menu                                                                                                                                                                                                                                                                                                               |
| <b>M90</b> | Display signal strength, signal quality, time ratio on the upper right corner.                                                                                                                                                                                                                                                |
| <b>M91</b> | Displays the Time Ratio between the Measured Total Transit Time and the Calculated time. If the pipe parameters are entered correctly and the transducers are properly installed, the ratio value should be in the range of $100\pm3\%$ . Otherwise the entered parameters and the transducer installation should be checked. |
| <b>M92</b> | Displays the estimated fluid sound velocity. If this value has an obvious difference with the actual fluid sound speed, pipe parameters entered and the transducer installation should be checked again.                                                                                                                      |
| <b>M93</b> | Displays total transit time and delta time(transit time difference)                                                                                                                                                                                                                                                           |
| <b>M94</b> | Displays the Reynolds number and the pipe factor used by the flow rate program.                                                                                                                                                                                                                                               |

## 4. How To

Please note that some items are only applied to certain Model.

### 4.1 How to judge if the instrument works properly

Enter into M08, if 'R' is displayed on the screen, the instrument is working properly,

If 'E' is displayed, the current loop output is over-ranged. Increasing the range setting in M57 will make the 'E' letter disappear. If you do not use current loop output, you may ignore this error.

If 'Q' is displayed, the frequency output is over-ranged. Increasing the range setting in M69 will make the 'Q' letter disappear. If you do not use frequency output, you may ignore this error.

If an 'H' flashes on that place, there could be poor signal received. Please refer to the chapters on diagnosis.

If 'G' is displayed, the flow meter is adjusting system gain. This is normal as far as it does not last long time.

If an 'I' is displayed, it means that there is no signal detected.

If 'J' is displayed, there is hardware problem. Turn off the power, then, turn on the power again. If the problem remains, refer to Chapter 5 for diagnosis details.

## 4.2 How to judge the liquid flowing direction

Make sure that the instrument works properly

Check the flow rate for the indication. If the displayed value is POSITIVE, the direction of the flow will be from the A transducers to the B transducers; if the displayed value is NEGATIVE, the direction will be from the B transducers to the A transducers;

## 4.3 How to change between units systems

Use menu window M30 for the selection of unit system in English or Metric system.

## 4.4 How to select a required flow rate unit

Use menu window M31 to select the flow unit first and then the timing unit.

## 4.5 How to use the totalizer multiplier

Use window M33 to select a proper totalizer. Make sure that the totalizer pulse is appropriately speeded. It should not be too fast and neither too slow. A speed of producing a pulse in several seconds or minutes is preferable.

If the totalizer multiplier is too small, there can be a loss of accumulation pulse because the output device can output only one pulse in a measurement period (500milliseconds)

If the totalizer multiplier is too large, the output pulse will be too fewer for the devices that are connected with the instrument for a quicker response.

## 4.6 How to open or shut the totalizers

Use M34, M35 and M36 to turn on or turn off the POS, NEG, or NET totalizer respectively.

## 4.7 How to reset the totalizers

Use M37 to reset the proper totalizer.

## 4.8 How to restore the flow meter with default setups

Use M37, when the 'selection' message is displayed. Press the dot key first and the message 'Master Erase' will display, then press the backspace key 

The master erase step will erase all the parameters entered by the user and setup the instrument with default values except "instrument factor" and "network identification number" parameter

## 4.9 How to use the damper

The damper acts as a filter for a stable reading. If '0' is entered in window M40, that means there is no damping. A bigger number brings a more stable effect. But bigger damper numbers will prevent the instrument from acting quickly.

Numbers 0 to 30 are commonly used for the damper value. Default value is 10 seconds.

## 4.10 How to use the zero-cutoff function

The number displayed in window M41 is called the lower flow rate cut-off value. The flow meter will replace these flow rate values that are absolutely less than the low-cutoff value with '0'. This means the flow meter will avoid any invalid accumulation when the actual flow is below the zero-cutoff value. Generally the default value is 0.03m/s

The low-cutoff value does not affect the flow measurement when the actual flow is absolutely greater than the low-cutoff value.

## 4.11 How to setup a zero point

There exists a 'Zero Point' with certain installation which means the flow meter will display a non-zero value when the flow is absolutely stopped. In this case, setting a zero point with the function in window M42 will bring a more accurate measurement result.

Make sure that there is no liquid running inside the pipe, and then run the function in window M42 by pressing the **ENT** key.

## 4.12 How to get a scale factor for calibration

A scale factor is the ratio between the 'actual flow rate' and the indicated value by the flow meter.

It can be determined by calibration with standard flow calibration equipment. You may change the scale factor in menu window M45.

The scale factor can be determined by calibration with flow calibration equipment.

## 4.13 How to use the system locker

The system locker provides a means of preventing inadvertent configuration changes or totalizer resets.

When the system is locked, menu window browsing can be done without affecting any change, but any modifications are prohibited.

The system can be locked without a password or with a 1 to 4 digit password. With a no-password locking, directly press the ENT key in M47

If the password is forgotten, please contact the factory.

## 4.14 How to use 4-20mA current loop output

The accuracy of the current loop output is better than 0.1%. It can be configured to different mode, such as 4-20mA mode, 0-20mA etc. Mode selection can be made in menu M55. Refer to the next chapter for details on M55.

In order to use the 4-20mA output function, you need not only select the mode to be 4-20mA in

M55, but also set the flow rate values which correspond to the minimum current (4mA) and the

maximum current (20mA). Enter the two values in M56 and M57.

Example A: flow rate range is 0-500m<sup>3</sup>/h. Just enter 0 in M56 and 500 in M57.

Example B: flow rate range is -500-0-1000m<sup>3</sup>/h. If flow direction is not an issue for you, you may select 20- 4-20mA mode in M55. Then, enter 500 in M56 and 1000 in M57. If flow direction is an issue, you may select 0-4-20mA mode in M55. This means that the current loop will output 0-4mA when flow rate is negative and 4-20mA when flow rate is positive. Enter -500 in M56 and 1000 in M57.

You may need to calibrate and test the current loop output before using it. Just go to menu M58 and do the following:

First, connect an ammeter to the current loop output.

Press **MENU** **5** **8**, then **ENT** to enter into menu M58.

Use  and  to display "0mA", "4mA", "8mA", "16mA", "20mA" orderly, record the corresponding reading on the ammeter. Calculate the differences between the readings and the selected ones. For instance, when 4mA is selected, the actual output current shown on the ammeter is 4.01mA. Then, the difference is 0.01mA.

If the differences are not within tolerance, calibrate the current loop

The present current loop output is displayed in Window M59. It changes along with flow rate change.

## 4.15 How to use the Frequency Output

There is a Frequency Output in all PWF-U2000H series flow meters. This frequency output signal, which represents the flow rate, is intended to connect with other instruments.

The Frequency Output is totally user-configurable. Generally, four parameters should be configured for the setups.

Enter the lower flow rate value in window M68 and the higher flow rate value in window M69.

Enter the frequency range in window M67.

For example, assume that the flow rate varies in a range  $0\text{m}^3/\text{h}$  to  $3000\text{m}^3/\text{h}$ , and an output signal is at a maximum frequency of 1000Hz, the minimum of 200Hz is going to be required for other instrumentation. The user should enter 0 in M68 and 3000 in M69, and enter 200 and 1000 in window M67.

Please note that the user has to make the selection with OCT setups in window M78.

## 4.16 How to use the Totalizer Pulse Output

The totalizer output will produce a pulse output with every unit flow of the totalizer.

The totalizer pulse output can only be realized by mapping the pulse output to the OCT or BUZZER hardware devices.

For example, assume that the POS totalizer pulse output is needed, and every pulse should represent 0.1 cubic meter of liquid flow; the pulse output will be mapped to the internal Buzzer, so that with every 0.1 cubic meter of flow the BUZZER will beep for a while.

The following setups should be taken / performed:

Select the unit Cubic Meter under window M32.

Select the Multiplier as '2. X0.1' under window M33.

Select the output option '9. POS INT Pulse' under window M77. (INT stands for totalized )

## 4.17 How to produce an alarm signal

There are 2 types of hardware alarm signals that are available with this instrument. One is the Buzzer, and the other is the OCT output.

Both for the Buzzer and OCT output the triggering sources of the event include the following:

There is no receiving signal

There is poor signal received.

The flow meter is not in normal measurement modes.

Reverse flow.

Overflow occurs at the analogue output by 100% or more

Overflow occurs at the frequency output by 120% or more.

(7) The flow rate is out of the specified range which is configured in windows M73 and M74 for Alarm #1, and in windows M75 and M76 for Alarm #2.

Example A: assume we need the Buzzer to start beeping when the flow meter is not ready in normal measurement. Switch to M77, select item "2. Abnormal Measurement State"

Example B: assume we need the Buzzer to start beeping when the flow rate is less than 300 m<sup>3</sup>/h and greater than 1000m<sup>3</sup>/h. The following setup steps would be recommended:

- (1) Enter flow rate lower limit 300 in M73 for #1 alarm,
- (2) Enter flow rate upper limit 1000 in M74 for #1 alarm,
- (3) Select item '6. Alarm #1' in M77.

Example C: assume we need the OCT output to activate when flow rate exceeds 100~500m<sup>3</sup>/h and the relay output to activate when flow rate exceeds 600~1000m<sup>3</sup>/h. The following setup steps would be recommended:

- (1) Enter flow rate lower limit 100 in M73
- (2) Enter flow rate upper limit 500 in M74
- (3) Enter flow rate lower limit 600 in M75
- (4) Enter flow rate lower limit 1000 in M76
- (5) Select item '6. Alarm #1' in M78
- (6) Select item '6. Alarm #1' in M79.

#### 4.18 How to use the built-in Buzzer

The built-in buzzer is user-configurable. It can be used as an alarm. Use M77 for setups.

#### 4.19 How to use the OCT output

The OCT output is user-configurable, which can be performed by selecting the proper input source such as pulse output. Use M78 for the setups.

Please make sure that the Frequency Output shares the OCT.

The OCT output shares pins with the RS-232C interface, and the terminal is at Pin 1 and 8

#### 4.20 How to modify the built-in calendar

No modification on the built-in calendar will be needed in most cases. The calendar runs on insignificant amount of power supply. Modification will be required only in such cases as when the battery is totally consumed, or when the changing of the battery takes a long time.

Press the ENT key under M60 for Modification. Use the dot key to skip over these digits that need no modification.

#### 4.21 How to view the Date Totalizers

Use M82 to view the date totalizers that are comprised of a daily totalizer, a monthly totalizer and a yearly totalizer.

## 4.22 How to use the Working Timer

Use the working timer to check the time that has passed with a certain kind of operation. For example, use it as a timer to show how long a fully-charged battery will last.

Under M72, press ENT key and then select YES to reset the timer.

## 4.23 How to use the manual totalizer

Use M38 for the manual totalizer. Press ENT key to start and stop the totalizer.

## 4.24 How to know how long the battery will last

Use M07 to check how long the battery will last. Also please refer to §.2.1

## 4.25 How to check the ESN and other minor details

Every set of the PWF-U2000H flow meter utilizes a unique ESN to identify the meter. The ESN is an 8-digit number that provides the information of version and manufacturing date.

The user can also employ the ESN for instrumentation management.

The ESN is displayed in window M61.

Other details about the instrument are the total working hours displayed in window M+1,

and the total power-on times displayed in window M+4.

## 4.26 How to use the data logger for scheduled output

Use menu window 51 to setup the time of scheduled output, including start time, time interval and how many times of output. Then use menu window 50 to turn on data logger and select the items you want to output.

## 4.27 How to output analogue voltage signal

Parallel a  $250\Omega$  resistance to the terminal of the Current loop output (No.21, 22), then you can change the 4-20mA output to analogue voltage output.

## 4.28 How to adjust the LCD display

You may use menu window 70 to setup the LCD display backlight and menu window 71 to adjust contrast it.

## 4.29 How to use RS232/RS485?

Use menu window 62 to set up RS232/RS485. All the devices connected with flow meter should have matched serial configuration.

The following parameters can be configured: Baud rate (300 to 19200 bps), parity, data bits (always is 8), stop bits (1).

## 4.30 How to use automatic amending function for offline compensation

Use menu window 83 turn on or turn off this function. When the function is enabled, the flow meter will estimate the average flow uncounted (or 'lost') during the offline session and add the result to the totalizer.

This function is not recommended. The user should manage to avoid the offline time to keep precision of the measurement result.

## 4.31 How to use batch controller

Please do the following to use the batch controller:

- 1) Go to menu window 80 to select the trig signal.
- 2) Go to menu window 78 (OCT output) or 79 (relay output), select "8 Batch Control".
- 3) Use menu window 81 to set the flow batch value (dose).

## 4.32 How to adjust the analogue output

We have adjusted every set of meter before delivery. Unless you find the current indicated in menu 58 is different with the actual current output, please do not do this operation.

Press keys **MENU** **▼/÷** **0**, use the password "4213068" to enter the window. Notice: the window will close after power off and the password will become invalid then.

Press keys **MENU** **▼/÷** **1**, to adjust the 4mA current output: use precision ammeter to measure the output current, at the same time, use **▲/+** **▼/÷** to adjust the digital on the flow meter until the ammeter indicate 4.00. Then press **ENT** to enter the window of adjusting the 20mA output.

When finished adjusting, you have to use menu window 26 to store the result into the flash

memory, so that it will be solidified and will not be lost even the reserve battery removed.

### 4.33 How to solidify the parameters

There are three kinds of parameters for the new generation TUF/TUC-2000:

- 1) Current parameters, the parameters are stored in the RAM. They will be lost when one cut the power or remove the reserve battery.
- 2) Solidified parameters, you may use menu window 26 to store the parameters in the Flash memory and they will not be lost even power off. This menu window is also a switch for the parameters in flash memory to be loaded when power is turned on. The default option is that the parameters will be loaded. So if the parameters are very stable, you may need this option.
- 3) User frequently-used parameters, you can use menu window 27 to store or restore from the internal Flash memory, as many as 9 different pipe parameter configurations.

### 4.34 How to enter the parameters of user-type-transducer

If a user-type-transducer is selected in menu window 23, you need proceed to enter additional 4 user-type-wedge parameters that describe the user transducers.

If the PI-type transducer is selected, you need enter additional 4 PI-type transducer parameters that describe the PI-type transducers.

### 4.35 How to use the circular display function

When entering menu window 95, the circular display function will be started automatically. The following windows will be displayed one by one, each window will stay for 8 seconds:

M95>>M00>>M01>>M02>>M02>>

M03>>M04>>M05>>M06>>M07>>M08>>M90>>M91>>M92>> M93>> M94>>M95. This function allows the user to visit all the important information without any manual action.

To stop this function, simply press a key. Or switch to a window other than M95.

### 4.36 How to enter into the linearity correcting? How to enter into the data?

When the product leaved the factory, the function is closed.

The menu can realize almost 12 parts linearity correcting. The user can choose from two points to twelve points to execute the linearity correcting according to user actual condition.

In order to explain the usage method of the menu, we suppose that we get the following table data through calibration the meter.

| Reference standard equipment flow (m <sup>3</sup> /h) | Instrumented show flow (m <sup>3</sup> /h) | Correction coefficient (standard / show value) |
|-------------------------------------------------------|--------------------------------------------|------------------------------------------------|
| 1.02                                                  | 0.0998                                     | 1.02                                           |
| 5.11                                                  | 5.505                                      | 0.93                                           |
| 10.34                                                 | 10.85                                      | 0.95                                           |
| 20.45                                                 | 19.78                                      | 1.03                                           |
| 50.56                                                 | 51.23                                      | 0.99                                           |

In order to revised the flow exceed the scope of the above table, without mutations of correction factor, we add two points on the basis of the above five points, (0 m<sup>3</sup>/h, 1.0) and (100000 m<sup>3</sup>/h, 1.0). (0 m<sup>3</sup>/h, 1.0) is called the minimum flow of the amendment point, this set of data is used to facilitate to generated a appropriate correction factor when Instrumented show flow under 1.02 m<sup>3</sup>/h. (100000 m<sup>3</sup>/h, 1.0) is called the maximum flow of the amendment point, this set of data is used to facilitate to generated a appropriate correction factor when Instrumented show flow above 50.56 m<sup>3</sup>/h. So that we get the following data sets from small to large.

|          |   |        |
|----------|---|--------|
| ( 0      | , | 1 )    |
| ( 0.0998 | , | 1.02 ) |
| ( 5.505  | , | 0.93 ) |
| ( 10.85  | , | 0.95 ) |
| ( 19.78  | , | 1.03 ) |
| ( 51.23  | , | 0.99 ) |
| ( 100000 | , | 1. )   |

The total is seven sets of data. The next step is to put seven sets of data entered into the Instrument. Pay attention to the input order in accordance with from small to large.

To enter the menu M48, then input the data set number "7", to be followed in the above seven sets of data, we revised the setup of a multi-segment linearity correcting.

If you need to cancel linearity correcting, simply enter "0" in the menu M48.

Decommissioned linearity correcting, you just need to enter in the menu M48 data points (in this case, is "7").

Noted: before the calibration of the instrument, you must first close the linearity correcting function. If under the condition that the linearity correcting function has not closed, the calibration data sets arising from the amendment must be dealing with the reverse curve of the data following the original amendment, then input to the Instrument. Reverse amendment is very complicated, and should be avoided.

### 4.37 How to save / restore frequently-used pipe parameters

You can use menu window 27 to store or restore from the internal Flash memory, as many as 9 different pipe parameter configurations.

## 5. Troubleshooting

### §5.1 Power-on Error Displays and Counter-Measures

The ultrasonic flow meter provides an automatic power-on diagnosis for the hardware problems. When any message (with the power on) in the following table displays, counter-measures should be taken.

| Error message                                   | Causes                                                   | Counter-measures                                                                                                                   |
|-------------------------------------------------|----------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|
| <b>ROM Testing Error<br/>Segment Test Error</b> | Problem with the software                                | (1)Power on again<br>(2)Contact with factory                                                                                       |
| <b>Stored Data Error</b>                        | The parameters entered by the user lose integration.     | <b>When this message displays, the user should press ENT key, and all the configuration will be restored to the default state.</b> |
| <b>Timer Slow Error<br/>Timer Fast Error</b>    | Problem with the timer-keeper or the crystal oscillator. | (1)Power on again<br>(2)Contact with factory                                                                                       |
| <b>Date Time Error</b>                          | Number errors with the calendar                          | Initialize the calendar by menu window M61                                                                                         |
| <b>Reboot repetitively</b>                      | <b>Hardware problems</b>                                 | <b>Contact the factory</b>                                                                                                         |

### §5.2 Error Code and Counter-Measures

The ultrasonic flow meter will show Error Code in the lower right corner with a single letter like I, R etc. on menu windows M00, M01, M02, M03, M90 and M08. When any abnormal Error Code shows, counter-measures should be taken.

| Error code | Correspondent Message displayed on M08 | Causes                                                                                                                                                                  | Counter-measures                                                          |
|------------|----------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------|
| <b>R</b>   | System Normal                          | No error                                                                                                                                                                |                                                                           |
| <b>I</b>   | Detect No Signal                       | (1)No Signals detected<br>(2)Transducers installed improperly<br>(3)Too much fouling<br>(4)Pipe liners are too thick.<br>(5)Transducer cords are not properly connected | (1)Relocate measuring location<br>(2)Clean the spot<br>(3)Check the cords |
| <b>J</b>   | Hardware Error                         | Hardware problem                                                                                                                                                        | <b>Contact the factory</b>                                                |

|                                  |                                                                             |                                                                                                                                                                 |                                                                                                                            |
|----------------------------------|-----------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|
| <b>H</b>                         | PoorSig Detected                                                            | (1)Poor signal detected<br>(2)Transducers installed improperly<br>(3)Too much fouling<br>(4)The pipe liners are too thick.<br>(5)Problem with transducers cords | <b>(1)Relocate measuring place</b><br><b>(2)Clean the spot</b><br><b>(3)Check the cords</b><br><b>(4)Check the coupler</b> |
| <b>Q</b>                         | Frequ OutputOver                                                            | The actual frequency for the Frequency Output is out of the range set by the user                                                                               | <b>Check the value entered at M66,M67,M68 and M69, and try to enter a larger value on M69</b>                              |
| <b>F</b>                         | System RAM Error<br>Date Time Error<br>CPU or IRQ Error<br>ROM Parity Error | (1) Temporary problems with RAM, RTC<br><br>(2) Permanent problems with hardware                                                                                | <b>(1) power on again</b><br><br><b>(2) contact factory</b>                                                                |
| <b>1</b><br><b>2</b><br><b>3</b> | Adjusting Gain                                                              | Instrument is in the progress of adjusting the gain for the signal, and the number indicates the progressive steps                                              |                                                                                                                            |
| <b>K</b>                         | Empty pipe                                                                  | <b>(1) No liquid inside pipe</b><br><b>(2) Setup error on M29</b>                                                                                               | <b>(1) Relocate where the pipe is full of liquid</b><br><b>(2) Enter 0 on M29</b>                                          |

### §5.3 Other Problems and Solutions

- (1) When the actual flow inside the pipe is not standstill, but the instrument displays 0.0000 for the flow rate, and 'R' displaying signal strength and the signal quality Q (value) has a satisfactory value?

The problems are likely caused by the user who has used the 'Set Zero' function on this non-standstill flowing pipe. To solve this problem, use the 'Reset Zero' function on menu window M43.

- (2) The displayed flow rate is much lower or much higher than the actual flow rate in the pipe under normal working conditions.
- There is probably an offset value wrongly entered by the user in M44. Enter '0' in M44.
  - Problem with transducer installation.
  - There is a 'Zero Point'. Try to 'zero' the instrument by using M42 and make sure that the flow inside the pipe should be standstill.

- (3) The battery can not work as long as the time period as indicated by M07

- (a) Battery should be replaced due to the end of the service life.
- (b) Newly changed battery does not fit the battery estimating software. Customizing the battery with the software should be taken. Please contact the factory.
- (c) The battery has not been fully recharged or the recharge has been stopped too many times halfway.
- (d) There is indeed a time difference between the actual working time and the estimated one, especially when the terminal voltage is in the range 3.70 and 3.90 volt. Please refer to battery voltage for a closer estimated working time.

## 6. Communication Protocol

### §6. 1 General

The ultrasonic flow meter integrates a standard RS-232 communication interface and a complete set of communication protocols that are compatible with that of the Fuji's ultrasonic flow meter.

### §6.2 Interface Pin-out Definition

|     |   |                                      |
|-----|---|--------------------------------------|
| Pin | 1 | for battery recharge, positive input |
|     | 2 | RXD                                  |
|     | 3 | TXD                                  |
|     | 4 | not used                             |
|     | 5 | GND                                  |
|     | 6 | OCT output                           |
|     | 7 | not used                             |
|     | 8 | for battery recharge, negative input |
|     | 9 | RING input for connecting a MODEM    |

## 7. Service

### §7.1 Service

The manufacturer provides instrument installation for our customers, and the charges will be made according to the cost.

- (1) For any hardware failure of the instrument, we recommend that our customers send back the instrument to our factory for service, due to the fact that the instrument is made of microprocessors and it will be difficult to perform field maintenance. Before sending back the instrument, please try to contact the factory first to make sure what the problem is.

For other operational problems, please contact our service department by telephone, fax or email and internet. In most cases, the problem could be solved immediately.

### §7.2 Software Upgrade Service

We provide free-of-charge software upgrade services. Please contact the factory for any lately developed software.

# Appendix

## 1. Sound speed data of liquid (unit: m/s)

| Liquids      | Sound speed |
|--------------|-------------|
| Water (20℃)  | 1482        |
| Water (50℃)  | 1543        |
| Water (75℃)  | 1554        |
| Water (100℃) | 1543        |
| Water (125℃) | 1511        |
| Water (150℃) | 1466        |
| Water (175℃) | 1401        |
| Water (200℃) | 1333        |
| Water (225℃) | 1249        |
| Water (250℃) | 1156        |
| Aceton       | 1190        |
| Methanol     | 1121        |
| Ethanol      | 1168        |
| Alcohol      | 1440        |
| Butanone     | 1310        |
| Acetaldehyde | 1180        |

| Liquids       | Sound speed |
|---------------|-------------|
| Glycerin      | 1923        |
| Petrol        | 1250        |
| 66# Petrol    | 1171        |
| 80# Petrol    | 1139        |
| 0# Diesel     | 1385        |
| Phenol        | 1330        |
| Ethyl benzene | 1340        |
| Toluene       | 1170        |
| Phenixin      | 938         |
| Coal oil      | 1420        |
| Petroleum     | 1290        |
| Pine oil      | 1280        |
| Chlorylene    | 1050        |
| Castor oil    | 1502        |
| Glycol        | 1620        |
| Peanut oil    | 1472        |

## 2. Sound speed data of solid (unit: m/s)

| Material     | Sound speed |
|--------------|-------------|
| Steel        | 3206        |
| ABS          | 2286        |
| Aluminum     | 3048        |
| Copper       | 2270        |
| Cast Iron    | 2460        |
| Bronze       | 2270        |
| GRP          | 3430        |
| Glass        | 3276        |
| Polyethylene | 1950        |
| PVC          | 2540        |

| Liner Material | Sound speed |
|----------------|-------------|
| Teflon         | 1225        |
| Ti             | 3150        |
| Cement         | 4190        |
| Asphalt        | 2540        |
| Enamel         | 2540        |
| Glass          | 5970        |
| Plastic        | 2280        |
| Polyethylene   | 1600        |
| PTFE           | 1450        |
| Rubber         | 1600        |

Note: Please contact with the manufacturer for other sound speed data.

### 3. Sound speed in water at atmosphere pressure

Unit: t (Deg C) v (m/s)

| t  | v      | t  | v      | t  | v      | t  | v      |
|----|--------|----|--------|----|--------|----|--------|
| 0  | 1402.3 | 25 | 1496.6 | 50 | 1542.5 | 75 | 1555.1 |
| 1  | 1407.3 | 26 | 1499.2 | 51 | 1543.5 | 76 | 1555.0 |
| 2  | 1412.2 | 27 | 1501.8 | 52 | 1544.6 | 77 | 1554.9 |
| 3  | 1416.9 | 28 | 1504.3 | 53 | 1545.5 | 78 | 1554.8 |
| 4  | 1421.6 | 29 | 1506.7 | 54 | 1546.4 | 79 | 1554.6 |
| 5  | 1426.1 | 30 | 1509.0 | 55 | 1547.3 | 80 | 1554.4 |
| 6  | 1430.5 | 31 | 1511.3 | 56 | 1548.1 | 81 | 1554.2 |
| 7  | 1434.8 | 32 | 1513.5 | 57 | 1548.9 | 82 | 1553.9 |
| 8  | 1439.1 | 33 | 1515.7 | 58 | 1549.6 | 83 | 1553.6 |
| 9  | 1443.2 | 34 | 1517.7 | 59 | 1550.3 | 84 | 1553.2 |
| 10 | 1447.2 | 35 | 1519.7 | 60 | 1550.9 | 85 | 1552.8 |
| 11 | 1451.1 | 36 | 1521.7 | 61 | 1551.5 | 86 | 1552.4 |
| 12 | 1454.9 | 37 | 1523.5 | 62 | 1552.0 | 87 | 1552.0 |
| 13 | 1458.7 | 38 | 1525.3 | 63 | 1552.5 | 88 | 1551.5 |
| 14 | 1462.3 | 39 | 1527.1 | 64 | 1553.0 | 89 | 1551.0 |
| 15 | 1465.8 | 40 | 1528.8 | 65 | 1553.4 | 90 | 1550.4 |
| 16 | 1469.3 | 41 | 1530.4 | 66 | 1553.7 | 91 | 1549.8 |
| 17 | 1472.7 | 42 | 1532.0 | 67 | 1554.0 | 92 | 1549.2 |
| 18 | 1476.0 | 43 | 1533.5 | 68 | 1554.3 | 93 | 1548.5 |
| 19 | 1479.1 | 44 | 1534.9 | 69 | 1554.5 | 94 | 1547.5 |
| 20 | 1482.3 | 45 | 1536.3 | 70 | 1554.7 | 95 | 1547.1 |
| 21 | 1485.3 | 46 | 1537.7 | 71 | 1554.9 | 96 | 1546.3 |
| 22 | 1488.2 | 47 | 1538.9 | 72 | 1555.0 | 97 | 1545.6 |
| 23 | 1491.1 | 48 | 1540.2 | 73 | 1555.0 | 98 | 1544.7 |
| 24 | 1493.9 | 49 | 1541.3 | 74 | 1555.1 | 99 | 1543.9 |